

SPECIAL INSTRUCTIONS FOR PROGRAMMING OF MINIK10M MIFARE LOCKS

INITIALISING AND SETTING LOCK MODES

1. **READ THE MiniK10 MANUAL BEFORE USING OR INSTALLING THE LOCK!!**
2. **BEFORE INSTALLING REMOVE BATTERY TAB ON THE REAR OF THE LOCK** AND INITIALISE LOCK BY ENTERING ## AND THEN PRESENTING A 13.56 MHz 1K MIFARE CARD TO ENROLL THE MASTER PROGRAMMING CARD.
3. **SET LOCK MODE: PRESS # # PRESENT MASTER CARD FOR GREEN LIGHT AND PRESS * RED AND GREEN LIGHTS FLASH, NOW PRESS THE MODE PROGRAM FROM ONE OF THE FOLLOWING:**
 - a. **1 PLUS 0 FOR PERSONAL OPERATION MODE BY RFID CARD**
 - b. **1 PLUS 1 FOR PUBLIC OPERATION MODE BY RFID CARD**
 - c. **1 PLUS 2 FOR PERSONAL OPERATION MODE BY 4-DIGIT PIN**
 - d. **1 PLUS 3 FOR PUBLIC OPERATION MODE BY 4-DIGIT PIN**
 - e. **1 PLUS 4 FOR PUBLIC OPERATION MODE USING EITHER RFID CARD OR 4-DIGIT PIN**


Note: When the mode is set to PIN operation for Private or Public Mode the default code to unlock is 1010. If Mode is set to Private the knob can be turned freely without PIN and requires a PIN to Open. When the Mode is set to Public the lock can be opened using default PIN 1010. To lock, a random 4-Digit PIN must be entered and the same PIN used to open.

4. **SET THE SERVICE OVERRIDE CARDS: PRESS # # PRESENT MASTER CARD FOR GREEN LIGHT AND PRESS * RED AND GREEN LIGHTS FLASH, NOW PRESS THE MODE PROGRAM NUMBER AND SERVICE CARD NUMBER FROM THE FOLLOWING:**
 - a. **5 + 1 AND PRESENT SERVICE CARD NUMBER 1 A GREEN LIGHT CONFIRMS THE CARD WAS ASSIGNED**
 - b. **5 + 2 AND PRESENT SERVICE CARD NUMBER 2 A GREEN LIGHT CONFIRMS THE CARD WAS ASSIGNED**
 - c. **5 + 3 AND PRESENT SERVICE CARD NUMBER 3 A GREEN LIGHT CONFIRMS THE CARD WAS ASSIGNED**
 - d. **IF YOU MAKE A MISTAKE SIMPLY REPEAT THE ABOVE INSTRUCTION FOR THE DESIRED CARD OR TO DELETE ALL SERVICE CARDS AND START AGAIN PRESS 5 + 0**
5. **SETTING A USER CARD: PRESS * PRESENT MASTER CARD FOR OVER THE KEYPAD, PRESS * AGAIN THEN ENTER THE SEQUENCE FOR THE USER CARD. IF THIS IS THE FIRST USER YOU ARE ENROLLING, THE SEQUENCE IS 0 1. IF THIS IS THE SECOND USER YOU ARE ENROLLING, THE SEQUENCE IS 0 2, AND SO ON. THE LOCK WILL RESPOND WITH ONE BEEP AND THE LED WILL FLASH GREEN TO CONFIRM THE ACCEPTANCE OF THE NEW USER CARD.**

MINIK10M VISUAL PROGRAMMING INSTRUCTIONS

• Assign Master card:

- 1- Press **# #**, two tone beep is heard.
- 2- And then present the master card to the keypad until one tone beep is heard and green led blinks.

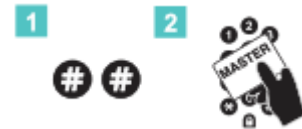

• Selecting Operation option of the mini K10m:

- 1- Press **# #**, present the master card to the keypad and press ***** green and red leds blink.

- 2- Press 1 for selecting operation options. And then
 - Press 0 for personal operation with card.
 - Press 1 for locker mode operation with card.
 - Press 2 for cardless personal operation.
 - Press 3 for cardless locker mode operation.
 - Press 4 for locker mode operation card or password.



• Assign/Delete Service card / cards: (If you don't need to use any service card, skip this step)

- 1- Press **# #**, present the master card to the keypad and press *****, green and red leds blink.

- 2- Press 5 for selecting service card assign / delete option. And then
 - Press 0 for all service cards are deleted.
 - Press 1 for assignment of 1. service card.
 - Press 2 for assignment of 2. service card.
 - Press 3 for assignment of 3. service card.



• Assign User card / cards : (If you don't need to use any user card, skip this step, when individual operation with card option is selected)

- 1- Press ***** and then present master card to the keypad, press ***** again.
- 2- Then enter the sequence number of user card
- 3- Present that card to lock.



• Deleting User card: (If you don't need to use any user card, skip this step, when individual operation with card option is selected)

- 1- Press ***** and then present master card to the keypad, press **#**.
- 2- Then enter the sequence number of user card.



OPERATING INSTRUCTIONS Personal operation with card

• To Unlock:

- 1- Press any number button for wake the lock up.
- 2- Present **any assigned user card / master card / service card** to the keypad in 3 seconds
- 3- turn the handle to the unlocked position.



• To Lock:

- 1- Press any number button for wake the lock up.
- 2- Present **any assigned user card / master card** to the keypad in 3 seconds
- 3- Turn the handle to the locked position.



INSTALLING THE LOCK

1. READ INSTALLATION MANUAL FIRST AND REFER TO INSTALLATION TEMPLATE PROVIDED
2. REMOVE BATTERY TAB AND SET/ENROLL MASTER PROGRAM CARD AS PER MANUAL OR THE ABOVE INSTRUCTIONS. DOT NOT CLOSE OR LOCK THE DOOR UNTIL YOU HAVE TESTED OPERATION ON DOOR OR **BEFORE CLOSING DOOR**.
3. BEFORE MOUNTING MAKE SURE KNOB IS IN LOCKED POSITION (12'0 CLOCK)
4. FIT THE STOP CAM TO CORRECT POSITION FOR LEFT OR RIGHT HAND OPENING
5. **DO NOT USE POWER TOOLS OR OVERTIGHTEN NUTS OR SCREWS AS THIS WILL PERMANENTLY DAMAGE THE LOCK AND VOID ALL WARRANTIES.** (Max Torque is 25Nm)
6. TEST CAM TO ENSURE IT DOES NOT BIND ON STRIKER PLATE AND ADJUST CABINET DOOR HINGES OR STRIKER PLATE ACCORDINGLY
7. LEAVE USER INSTRUCTION MANUAL INSIDE LOCKER AFTER INSTALLATION IF PROVIDED

FOR TECHNICAL SUPPORT PLEASE CONTACT

TECHNICAL SUPPORT CONTACT DETAILS

Sam Neaves 0436315271
KSQ Keywatch Systems Qld
PO Box 684 Surfers Paradise Qld 4217
📞 0436 315 271 | Free Call 1800 KEYPRO
✉️ sam@ksq.com.au | 🌐 www.ksq.com.au

PLEASE NOTE:

FACILITY END USERS WISHING TO OPERATE THE MiniK10 MIFARE LOCKS USING THEIR EXISTING RFID CARD

BECAUSE OF THE VARIOUS DIFFERENT MIFARE CARD TECHNOLOGIES ON THE MARKET KSQ WILL REQUIRE THREE (3) OF THE CUSTOMER'S RFID CARDS FOR TESTING PRIOR TO PURCHASING. KSQ ACCEPT NO RESPONSIBILITY OR LIABILITY IF LOCKS ARE PURCHASED WITHOUT PRIOR TESTING OF CUSTOMER CARDS BY KSQ AND A RESTOCKING FEE OF 50% WILL APPLY FOR ANY ALL RETURNED LOCKS IF CUSTOMER CARDS ARE NOT COMPATIBLE. ALTERNATIVELY, A SAMPLE LOCK CAN BE SENT TO THE CUSTOMER ON A LOAN and RETURN BASIS FOR \$50 TO COVER POSTAGE AND HANDLING. IF LOCK WORKS WITH CUSTOMER CARDS LOCK CAN BE RETAINED AS PART OF THEIR ORDER

- ⚠️ **ATTENTION:** (*) (Battery life may vary in accordance with battery brand, programming parameters and environmental conditions of the product is used.)
- ⚠️ **ATTENTION:** Remember to write down your passwords after programming and prior to installing lock. It is not possible to open lock if it is in installed and you forget your passwords.
- ⚠️ **ATTENTION:** miniK10 is made for only interior usage.